


## ADJUSTING THE GAP.

TO ADJUST THE GAP FOR YOUR PREFERENCE, SIMPLY LOOSEN THE CROSS SCREW SLIGHTLY, ROTATE THE FINGER PIECE UPWARD AND BEND IT SLIGHTLY TOWARD THE CENTERLINE. PUSH FINGER PIECE BACK DOWN LEVEL AND RETIGHTEN SCREW. THEN SLIGHTLY, A LITTLE AT A TIME, BEND THE FINGER PIECE AWAY FROM THE CENTER GROUND POST TILL YOU GET THE GAP AND FEEL YOU LIKE.

TO CLEAN CONTACT POINT, PUT A WHITE BUSINESS CARD BETWEEN FINGER PIECE AND GROUND POST, SQUEEZE PIECES TOGETHER AND SLIDE CARD IN AND OUT A FEW TIMES.

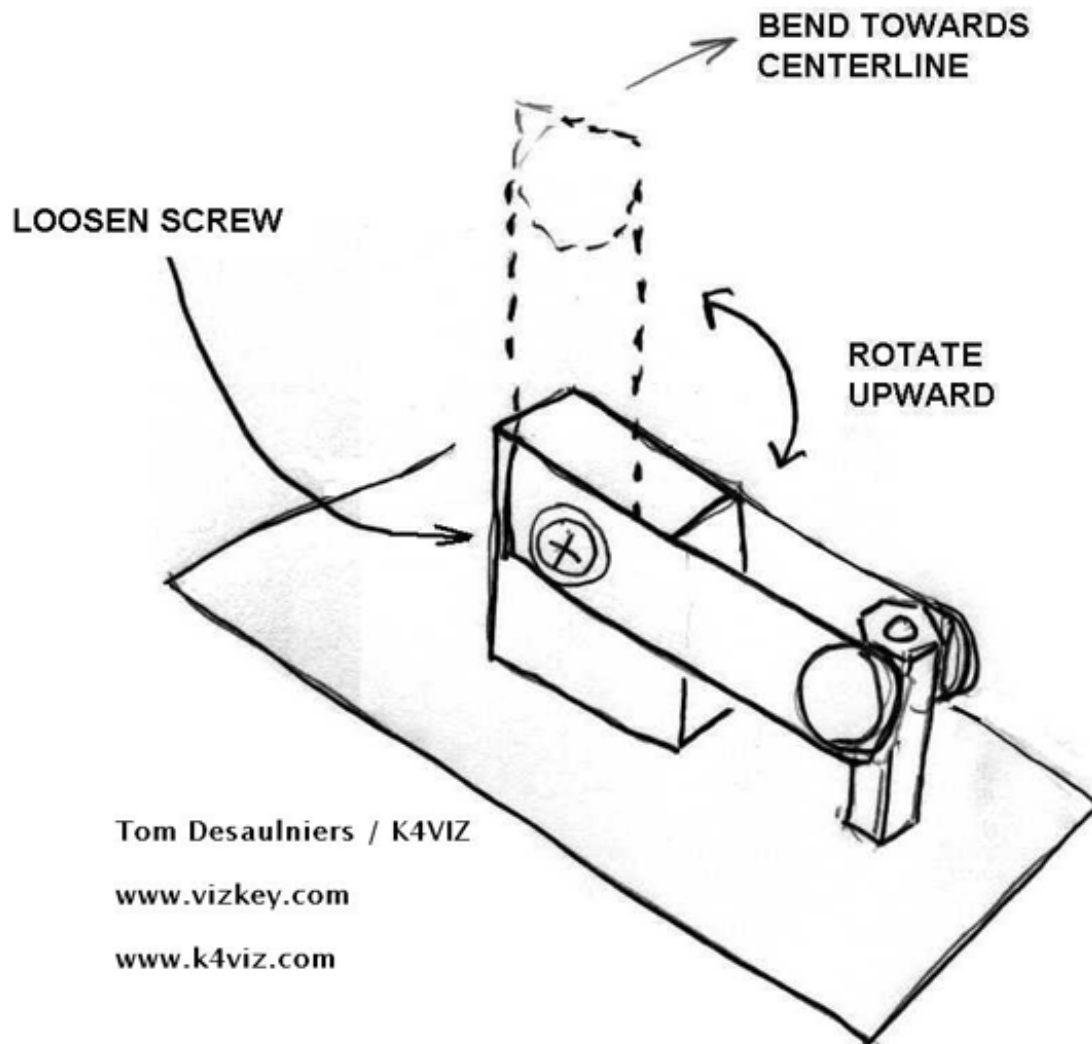

Tom Desaulniers / K4VIZ

[www.vizkey.com](http://www.vizkey.com)

[www.k4viz.com](http://www.k4viz.com)